



ABOUT VINTAGE

DENMARK

INSTRUCTIONS

1934 TELECHRON

In 1934 the second pusher on a chronograph watch, for quicker resetting of the seconds hand, was first patented thus marking the 2.0 of chronograph watches.


The Telechron is as well our 2.0 chronograph, featuring a telemeter scale for measuring the distance of sound, as well as date and stopwatch functions.

With clear references to vintage watchmaking, paired with modern technology, this is very much the essence of About Vintage.

Using your Telemeter scale

The telemeter scale makes you able to measure your distance from an event based on the speed of sound.

Start your stopwatch when you see the flash of lightning (Button A) Stop the stopwatch when you hear the rumble of the thunder (Button A) read the distance in kilometers on the watch.

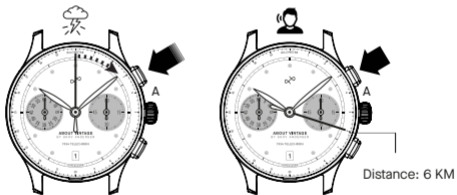

For us, Vintage is not just a reference of style - it is also the journey to actually becoming vintage.

The journey (Life) will take you through eventful moments and memorable days to occasions that change your whole perspective.

We hope that one day your About Vintage watch will help you bring back memories of the special times in your life

SPECIFICATIONS

Caliber:	MIYOTA 6S21
Battery / Battery life:	SR927W (recommended) Approx. 3 years
Glass:	Domed Sapphire Crystal with anti-reflective coating
Water Resistance:	5. ATM - Water tested to 50 Meters Suitable for showering and swimming in shallow water (Without leather strap)



HOW TO SET TIME

1. Pull the crown out to the 2nd click position
2. Turn the crown clockwise to set hour and minutes hand.
3. Push the crown back into normal position.

Go to www.aboutvintage.com for warranty information

SETTING THE DATE

1. Pull the crown out to the 1st click position
2. Turn the crown clockwise to set the date.
(If the date is set between the hours of 9:00 PM and 1:00 AM, the date may not change the following day)
3. Push the crown back into normal position.

USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/4 second units up to a maximum of 59 min. 59 sec.

MEASURING TIME WITH THE STOPWATCH

Press button "A" to start the chronograph

The chronograph can be started and stopped each time button "A" is pressed.

Press button "B" to reset the chronograph minute and seconds hands.

The chronograph hands will return to their Zero positions.

CHRONOGRAPH RESET (INCL: AFTER REPLACING BATTERY)

This procedure should be performed when the chronograph second hand does not return to the Zero position.

1. Pull the crown out to the 2nd click position
2. Press the button "A" to set the chronograph second hand to the Zero position (The chronograph hand can be advanced rapidly by continuously pressing button "A")
3. Once the hands are set at Zero position, reset the time and return the crown to its normal position.



FOR THE TRUE GENTLEMAN AND WOMAN

We are profoundly grateful.
Thank you for your support.

Take good care of your new timepiece.
Make moments, give it history
- let it become vintage.