



ABOUT VINTAGE

DENMARK

INSTRUCTIONS

1968 MOONPHASE

INTRODUCTION

Inspired by the elegance of a bygone era, the 1968 Sixtyeight collection is a tribute to timeless design and refined simplicity. Subtle yet full of character, it reveals itself through delicate dial details, layered depth, balanced proportions, and a versatile aesthetic that suits any occasion.

At its heart, this collection is an invitation to embrace classic sophistication in its purest form. An essential watch that belongs in any collection.

This is a rare release for us. We're bringing back the moonphase with a bold, eye-catching guilloché dial in a striking color. And trust us, when we say we're over the moon about this one, we mean it.

For us, Vintage is not just a reference of style - it is also the journey to actually becoming vintage.

The journey (Life) will take you through eventful moments and memorable days to occasions that change your whole perspective.

We hope that one day your About Vintage watch will help you bring back memories of the special times in your life.

OVERVIEW



SPECIFICATIONS

Caliber:	MIYOTA 6P20 MOONPHASE
Battery / Battery life:	SR621SW (recommended) Approx. 2 years
Glass:	Double domed Sapphire Crystal
Water Resistance:	5. ATM

SETTING THE DAY AND TIME (HOUR, MINUTE AND SECOND)

The hour, minute, second and day are set by the same operation.

SETTING THE DAY

Pull the crown out to the 2nd position to stop the second hand at 0 (12 o'clock). Turn the hour/minute hands in a clockwise direction to set a day. In order to set the day, you must advance the hour hand by 24 hours per day.

NOTE:

* If the day is set by turning the crown counterclockwise, there is the possibility the date will not change over.

Do not set the day by turning the crown in counterclockwise direction.* The day changes somewhere between 0:00a.m. and 5:30a.m. or a little later.

SETTING THE TIME

After setting the day, set the hour and minute hands.

Turn the hour/minute hands in a clockwise direction to set the time. To ensure time is set accurately, first turn the minute hand 5 minutes ahead of desired time and then turn back (in a counterclockwise) to the desired time.

SETTING THE AGE OF THE MOON

Pull the crown out to the 1st position.

Turn the crown clockwise to advance the moon phase.

Check the newspaper or other source that lists current age or phase of the moon.

SETTING THE DATE (BY QUICK OPERATION)

Pull the crown out to the 1st position.

Turn the crown counterclockwise to set the date quickly.

NOTE:

* Do not set the date between the hours 9:00p.m. and 0:30a.m..The date may not change correctly the next day.



FOR THE TRUE GENTLEMAN AND WOMAN

We are profoundly grateful.
Thank you for your support.

Take good care of your new timepiece.
Make moments, give it history
- let it become vintage.